


Spare parts list silent diesel generator **GSEm 7000 SDE**



GSEm 7000 SDE Explosion diagram

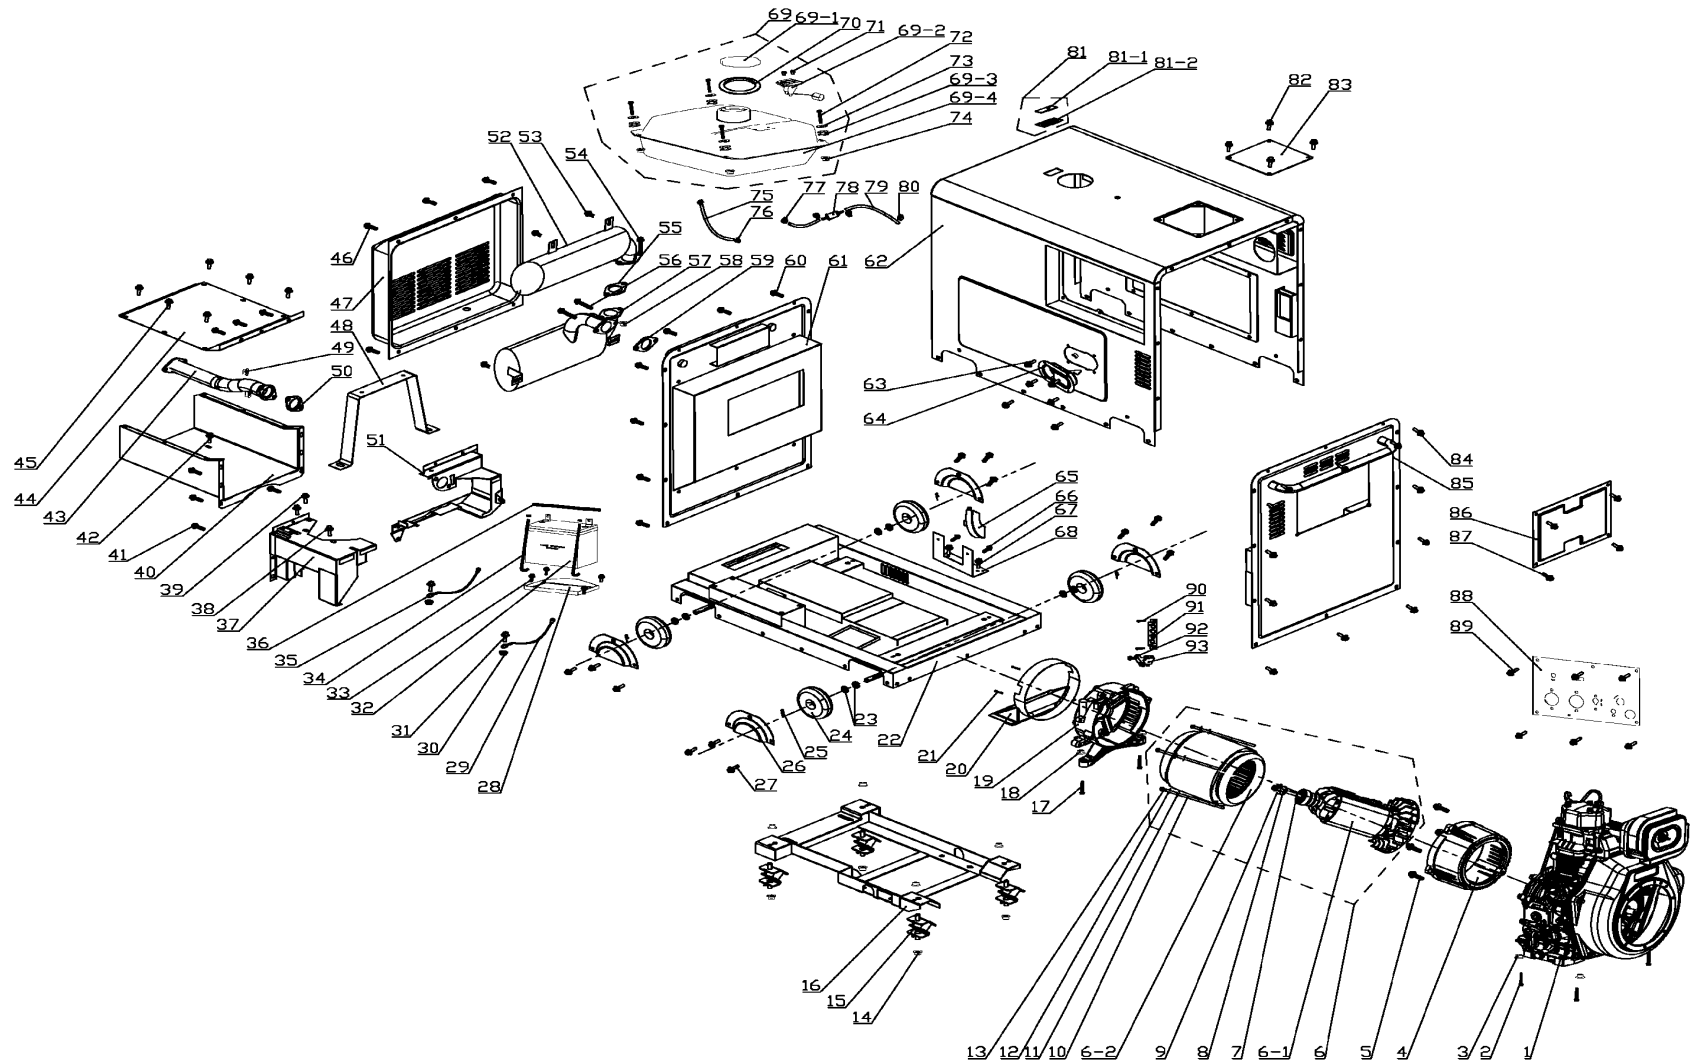

GSEm 7000 SDE spare parts				
Ser.No	Order code	Description	Reqd. QTY	UNIT
1	39070000601S001	Engine	1	PCS
2	39070000601S002	bolt	4	PCS
3	39070000601S003	Nut	4	PCS
4	39070000601S004	Generator cover	1	PCS
5	39070000601S005	bolt	4	PCS
6	39070000601S006	generator	1	PCS
6-1	39070000601S0061	Generator rotor	1	PCS
6-2	39070000601S0062	Generator stator	1	PCS
7	39070000601S007	bolt	1	PCS
8	39070000601S008	Flat pad	1	PCS
9	39070000601S009	Spring cushion	1	PCS
10	39070000601S010	bolt	1	PCS
11	39070000601S011	Flat pad	4	PCS
12	39070000601S012	Spring cushion	4	PCS
14	39070000601S014	Nut	8	PCS
15	39070000601S015	Shock absorber	4	PCS
16	39070000601S016	bracket	1	PCS
17	39070000601S017	bolt	2	PCS
18	39070000601S018	Nut	2	PCS
19	39070000601S019	Motor bracket	1	PCS
20	39070000601S020	Motor tail cover	1	PCS
21	39070000601S021	bolt	2	PCS
22	39070000601S022	Box base	1	PCS
23	39070000601S023	Axle gasket	8	PCS
24	39070000601S024	wheel	4	PCS
25	39070000601S025	Locating pin lock clamp	4	PCS
26	39070000601S026	Wheel guard	4	PCS
27	39070000601S027	bolt	12	PCS
28	39070000601S028	Battery mounting plate	1	PCS
29	39070000601S029	Battery positive wire	1	PCS
30	39070000601S030	Nut	4	PCS
31	39070000601S031	bolt	2	PCS
32	39070000601S032	Battery	1	PCS
33	39070000601S033	bolt	4	PCS
34	39070000601S034	L type bolt	2	PCS
35	39070000601S035	Battery negative wire	1	PCS
36	39070000601S036	Battery pressure plate	1	PCS
37	39070000601S037	Rear air deflector	1	PCS
38	39070000601S038	bolt	2	PCS
39	39070000601S039	bolt	1	PCS
40	39070000601S040	Wind channel	1	PCS
41	39070000601S041	bolt	6	PCS
42	39070000601S042	bolt	2	PCS
43	39070000601S043	Bellows	1	PCS
44	39070000601S044	Wind channel cover	1	PCS
45	39070000601S045	bolt	9	PCS
46	39070000601S046	bolt	6	PCS
47	39070000601S047	Muffler guard plate	1	PCS
48	39070000601S048	Air duct support plate	1	PCS
49	39070000601S049	Nut	2	PCS
50	39070000601S050	Muffler gasket	1	PCS
51	39070000601S051	Front wind deflector	1	PCS
52	39070000601S052	silencer-2	1	PCS
53	39070000601S053	bolt	4	PCS
54	39070000601S054	/	/	PCS
55	39070000601S055	/	/	PCS

56	39070000601S056	bolt	2	PCS
57	39070000601S057	silencer-1		PCS
58	39070000601S058	/	/	PCS
59	39070000601S059	Muffler gasket	1	PCS
60	39070000601S060	bolt	12	PCS
61	39070000601S061	Muffler side panel	1	PCS
62	39070000601S062	Box body	1	PCS
63	39070000601S063	bolt	4	PCS
64	39070000601S064	Door lock	1	PCS
65	39070000601S065	A.V.R.	1	PCS
66	39070000601S066	bolt	2	PCS
67	39070000601S067	bolt	2	PCS
68	39070000601S068	A.V.R. Mounting plate	1	PCS
69	39070000601S069	Fuel tank	1	PCS
71	39070000601S071	bolt	2	PCS
72	39070000601S072	bolt	4	PCS
74	39070000601S074	/	/	PCS
75	39070000601S075	Fuel return pipe	0.6	PCS
76	39070000601S076	Clamp	2	PCS
77	39070000601S077	Clamp	1	PCS
78	39070000601S078	Diesel filter	1	PCS
79	39070000601S079	Fuel inlet pipe	0.3	PCS
80	39070000601S080	Clamp	3	PCS
81	39070000601S081	/	/	PCS
81-1	39070000601S0811	glass	1	PCS
81-2	39070000601S0812	Rubber gasket	1	PCS
82	39070000601S082	bolt	4	PCS
83	39070000601S083	Pressure reducing valve cover	1	PCS
84	39070000601S084	bolt	10	PCS
85	39070000601S085	Power side panel	1	PCS
86	39070000601S086	Air filter access door	1	PCS
87	39070000601S087	bolt	4	PCS
88	39070000601S088	Control panel assembly	1	PCS
88-1	39070000601S0881	Start switch	1	PCS
88-2	39070000601S0882	Type 30-1P circuit breaker	1	PCS
88-3	39070000601S0883	DC binding post/red	1	PCS
88-4	39070000601S0884	DC binding post/black	1	PCS
88-5	39070000601S0885	Blue/European industrial/32A/220V-250V	1	PCS
88-6	39070000601S0886	Blue/European industrial/16A/250V	1	PCS
88-7	39070000601S0887	three-in-one watch	1	PCS
88-8	39070000601S0888	Oil warning light	1	PCS
89	39070000601S089	bolt	6	PCS
90	39070000601S090	bolt	2	PCS
91	39070000601S091	Wiring board assembly	1	PCS
92	39070000601S092	bolt	1	PCS
93	39070000601S093	Carbon brush	1	PCS