


Spare parts list silent diesel generator **GSEm 7000 TDE**



GSEm 7000 TDE Explosion diagram

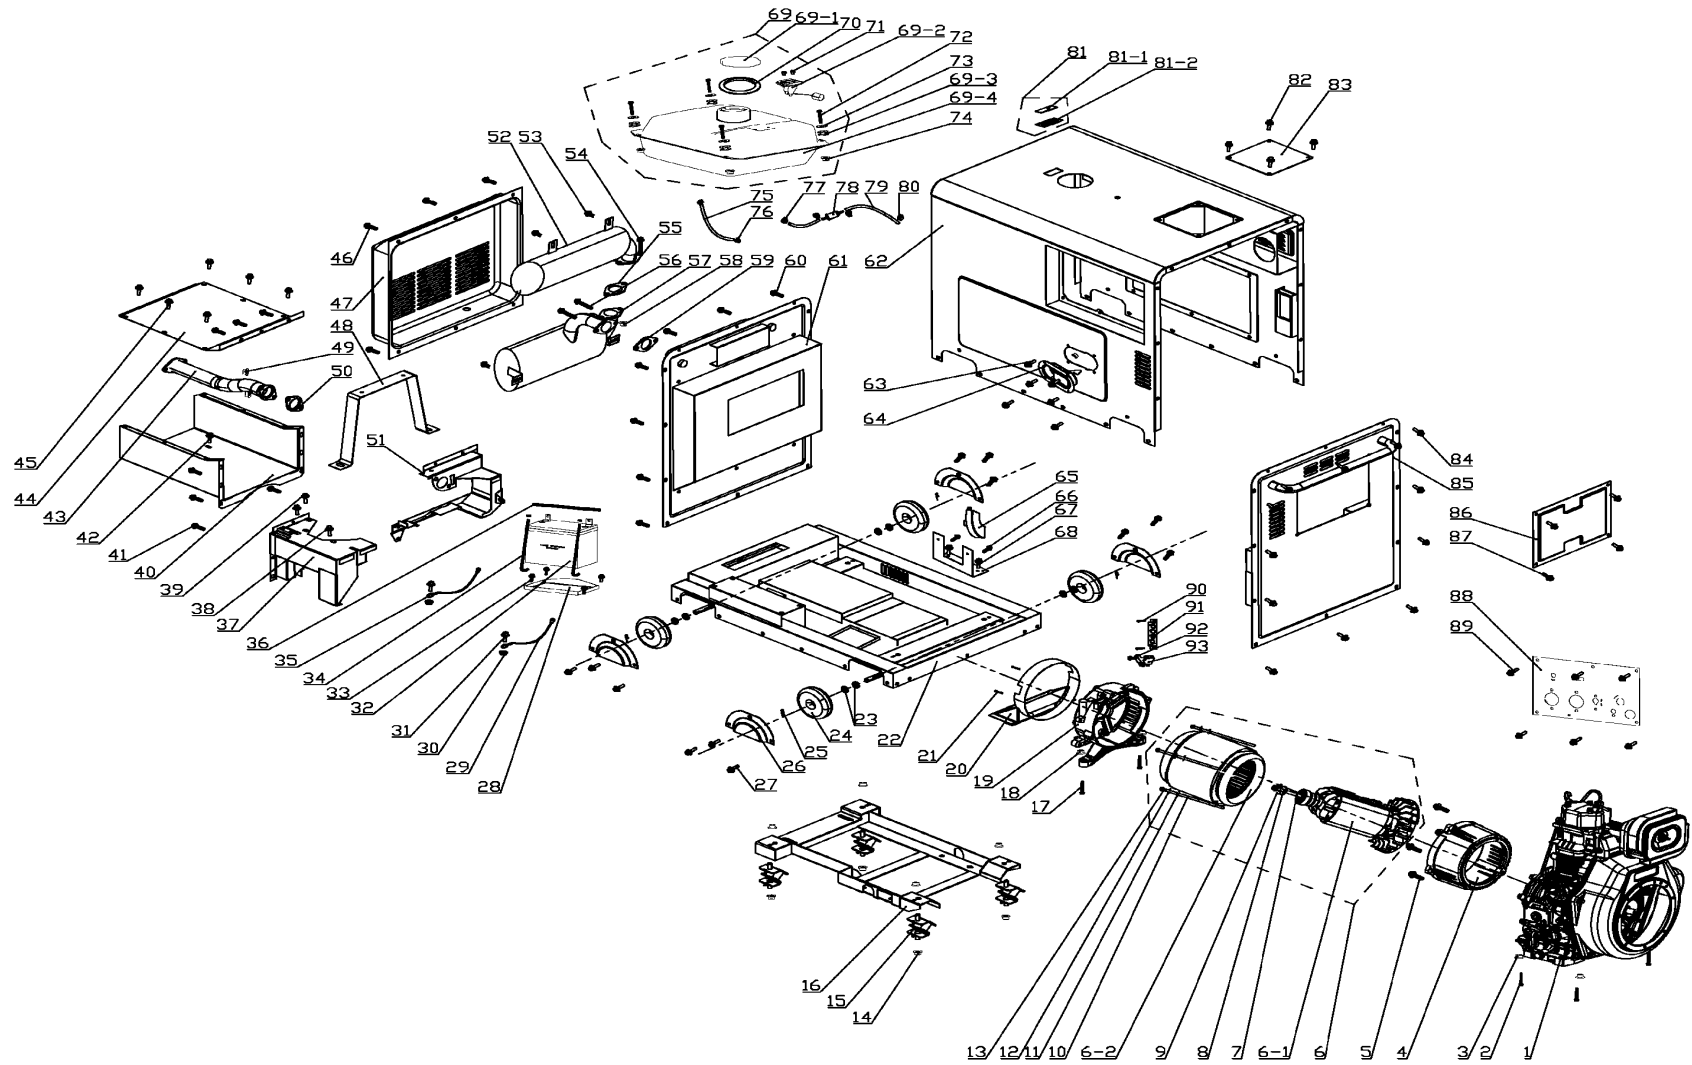

GSEm 7000 TDE Spare parts				
Ser.No	Order code	Description	Reqd. QTY	UNIT
1	39070000611S001	Engine	1	PCS
2	39070000611S002	bolt	4	PCS
3	39070000611S003	Nut	4	PCS
4	39070000611S004	Generator cover	1	PCS
5	39070000611S005	bolt	4	PCS
6	39070000611S006	generator	1	PCS
6-1	39070000611S0061	Generator rotor	1	PCS
6-2	39070000611S0062	Generator stator	1	PCS
7	39070000611S007	bolt	1	PCS
8	39070000611S008	Flat pad	1	PCS
9	39070000611S009	Spring cushion	1	PCS
10	39070000611S010	bolt	1	PCS
11	39070000611S011	Flat pad	4	PCS
12	39070000611S012	Spring cushion	4	PCS
14	39070000611S014	Nut	8	PCS
15	39070000611S015	Shock absorber	4	PCS
16	39070000611S016	bracket	1	PCS
17	39070000611S017	bolt	2	PCS
18	39070000611S018	Nut	2	PCS
19	39070000611S019	Motor bracket	1	PCS
20	39070000611S020	Motor tail cover	1	PCS
21	39070000611S021	bolt	2	PCS
22	39070000611S022	Box base	1	PCS
23	39070000611S023	Axle gasket	8	PCS
24	39070000611S024	wheel	4	PCS
25	39070000611S025	Locating pin lock clamp	4	PCS
26	39070000611S026	Wheel guard	4	PCS
27	39070000611S027	bolt	12	PCS
28	39070000611S028	Battery mounting plate	1	PCS
29	39070000611S029	Battery positive wire	1	PCS
30	39070000611S030	Nut	4	PCS
31	39070000611S031	bolt	2	PCS
32	39070000611S032	Battery	1	PCS
33	39070000611S033	bolt	4	PCS
34	39070000611S034	L type bolt	2	PCS
35	39070000611S035	Battery negative wire	1	PCS
36	39070000611S036	Battery pressure plate	1	PCS
37	39070000611S037	Rear air deflector	1	PCS
38	39070000611S038	bolt	2	PCS
39	39070000611S039	bolt	1	PCS
40	39070000611S040	Wind channel	1	PCS
41	39070000611S041	bolt	6	PCS
42	39070000611S042	bolt	2	PCS
43	39070000611S043	Bellows	1	PCS
44	39070000611S044	Wind channel cover	1	PCS
45	39070000611S045	bolt	9	PCS
46	39070000611S046	bolt	6	PCS
47	39070000611S047	Muffler guard plate	1	PCS
48	39070000611S048	Air duct support plate	1	PCS
49	39070000611S049	Nut	2	PCS
50	39070000611S050	Muffler gasket	1	PCS
51	39070000611S051	Front wind deflector	1	PCS
52	39070000611S052	silencer-2	1	PCS
53	39070000611S053	bolt	4	PCS
56	39070000611S056	bolt	2	PCS
59	39070000611S059	Muffler gasket	1	PCS

60	39070000611S060	bolt	12	PCS
61	39070000611S061	Muffler side panel	1	PCS
62	39070000611S062	Box body	1	PCS
63	39070000611S063	bolt	4	PCS
64	39070000611S064	Door lock	1	PCS
65	39070000611S065	A.V.R.	1	PCS
66	39070000611S066	bolt	2	PCS
67	39070000611S067	bolt	2	PCS
68	39070000611S068	A.V.R. Mounting plate	1	PCS
69	39070000611S069	Fuel tank	1	PCS
71	39070000611S071	bolt	2	PCS
72	39070000611S072	bolt	4	PCS
75	39070000611S075	Fuel return pipe	0.6	PCS
76	39070000611S076	Clamp	2	PCS
77	39070000611S077	Clamp	1	PCS
78	39070000611S078	Diesel filter	1	PCS
79	39070000611S079	Fuel inlet pipe	0.3	PCS
80	39070000611S080	Clamp	3	PCS
81-1	39070000611S0811	glass	1	PCS
81-2	39070000611S0812	Rubber gasket	1	PCS
82	39070000611S082	bolt	4	PCS
83	39070000611S083	Pressure reducing valve cover	1	PCS
84	39070000611S084	bolt	10	PCS
85	39070000611S085	Power side panel	1	PCS
86	39070000611S086	Air filter access door	1	PCS
87	39070000611S087	bolt	4	PCS
88	39070000611S088	Control panel assembly	1	PCS
88-1	39070000611S0881	Start switch	1	PCS
88-2	39070000611S0882	Type 30-1P circuit breaker	1	PCS
88-3	39070000611S0883	DC binding post/red	1	PCS
88-4	39070000611S0884	DC binding post/black	1	PCS
88-5	39070000611S0885	Blue/European industrial/32A/220V	1	PCS
88-7	39070000611S0887	three-in-one watch	1	PCS
88-8	39070000611S0888	Oil warning light	1	PCS
89	39070000611S089	bolt	6	PCS
90	39070000611S090	bolt	2	PCS
91	39070000611S091	Wiring board assembly	1	PCS
92	39070000611S092	bolt	1	PCS
93	39070000611S093	Carbon brush	1	PCS