



BCEm 4317

BRUSH CUTTER

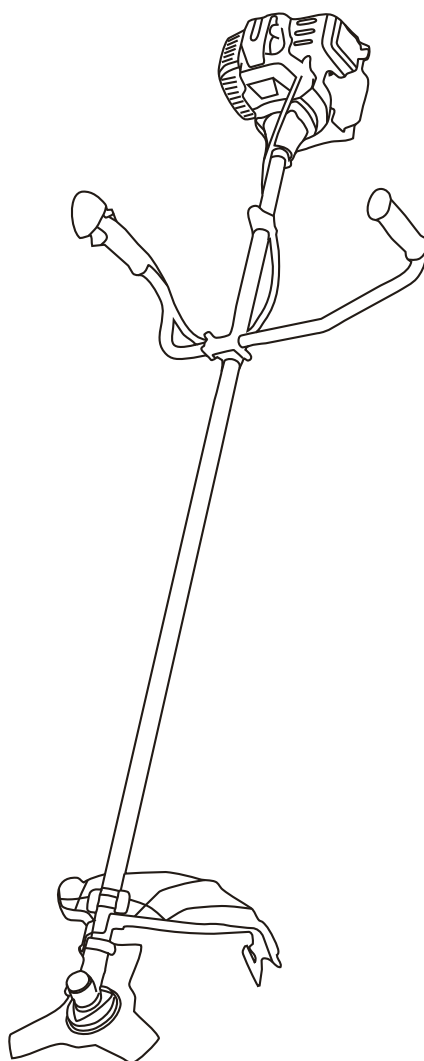


Spare parts list

Spare parts list BCEm 4317

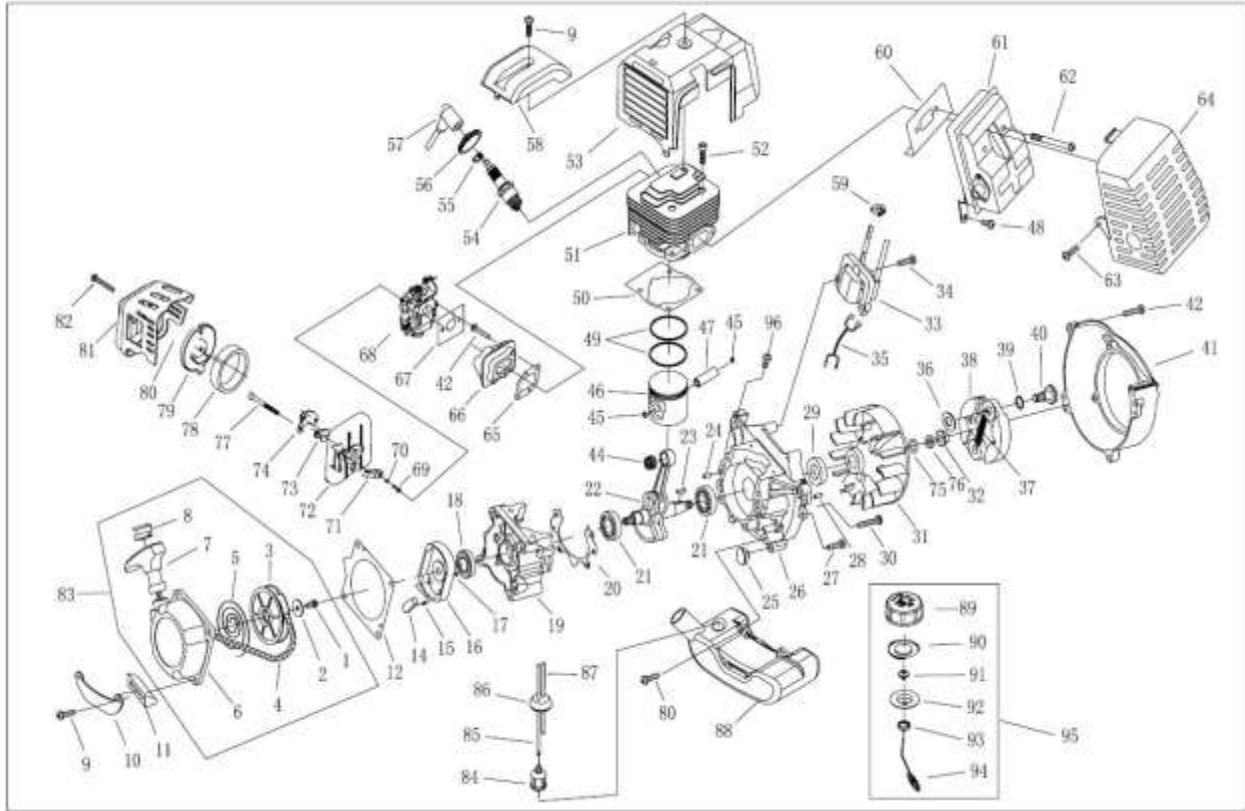

ORDER CODE	KIT NO.	description	Including positions
60043020201SE01	KIT NO.1	Starter KIT	1,2,3,4,5,6,7,8,83
60043020201SE02	KIT NO.2	Body parts	9,10,11,40,41,42,53,58,63,64,80,81,82
60043020201SE03	KIT NO.3	Carburator	65,66,67,68,69,70,71,72,73,74,77,78,79
60043020201SE04	KIT NO.4	Starter Body	12,14,15,16,17
60043020201SE05	KIT NO.5	Crank Shaft	18,20,21,22,23,44
60043020201SE06	KIT NO.6	Crank Case	19,24,25,26,27,28,29,30,96
60043020201SE07	KIT NO.7	Fly Wheel	31,32,75,76
60043020201SE08	KIT NO.8	Cord Comp.	33,34,35,55,56,57,59
60043020201SE09	KIT NO.9	Piston	45,46,47,48,49,50,51,52
60043020201SE10	KIT NO.10	Fuel Tank Lid COMP.	89,90,91,92,93,94,95
60043020201SE11	KIT NO.11	Fuel Pipe	84,85,86,87
60043020201SE12	KIT NO.12	Fuel Tank	88
60043020201SE13	KIT NO.13	Expander	36,37,38,39
60043020201SE14	KIT NO.14	Muffler	60,61,62

Spare parts list BCEm 4317

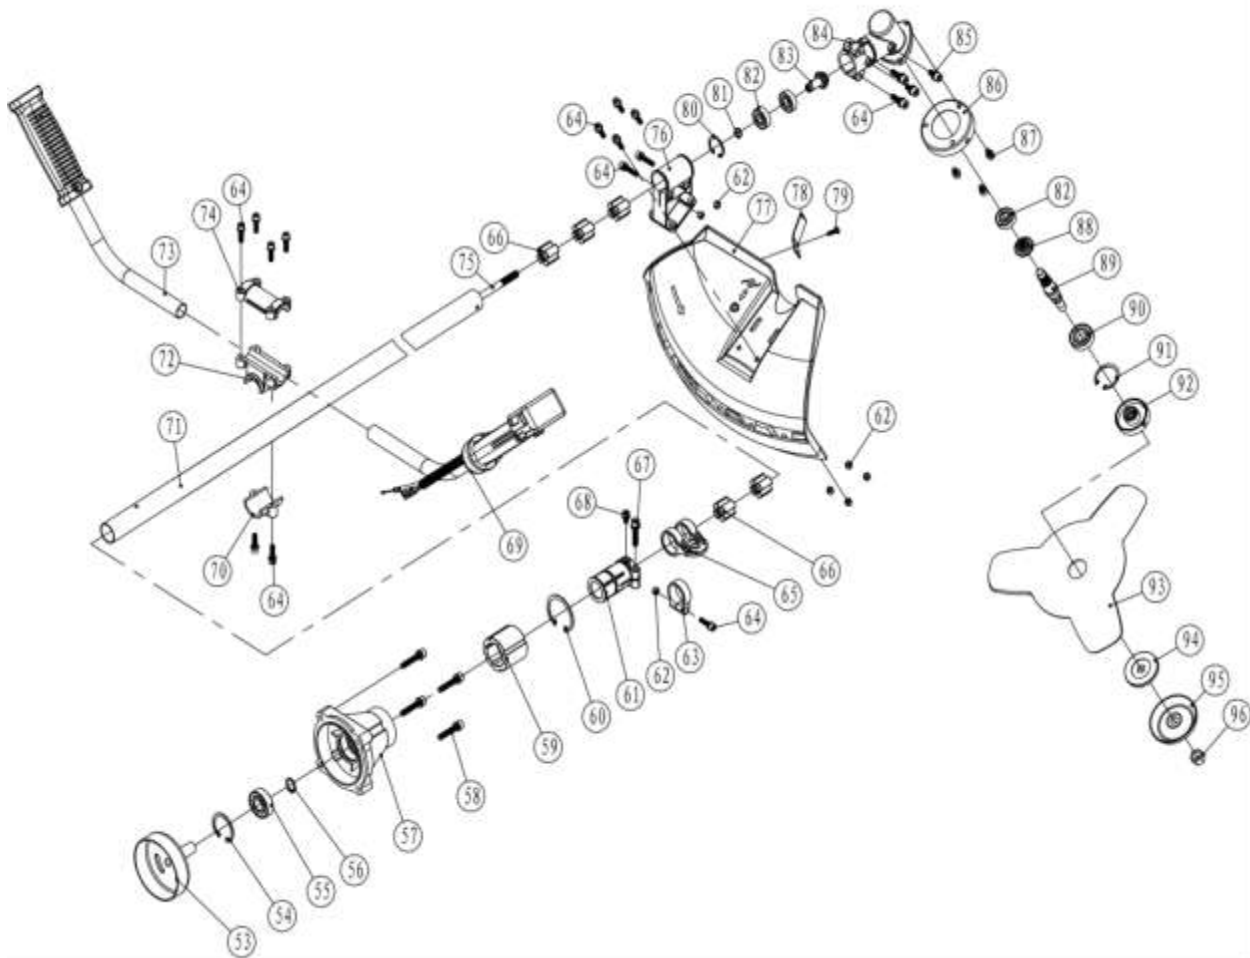

ORDER CODE	KIT NO.	description	
60043020201SB01	KIT NO.1	Clutch Drum assy	53,54,55,56
60043020201SB02	KIT NO.2	Holder Ass'y	57,58,59,60
60043020201SB03	KIT NO.3	Connecting rod	61,62,63,64,65,67,68
60043020201SB04	KIT NO.4	Oil bearing	66
60043020201SB05	KIT NO.5	Guard Ass'y	76,77,78,79
60043020201SB06	KIT NO.6	Gear Case Ass'y	80,81,82,83,84,85,86,87,88,89,90,91,92,94,95,96
60043020201SB07	KIT NO.7	Pipe Comp.	70,71,72,74
60043020201SB08	KIT NO.8	Switch handle	69
60043020201SB09	KIT NO.9	Left Handle	73