



BCEm 5220

BRUSH CUTTER

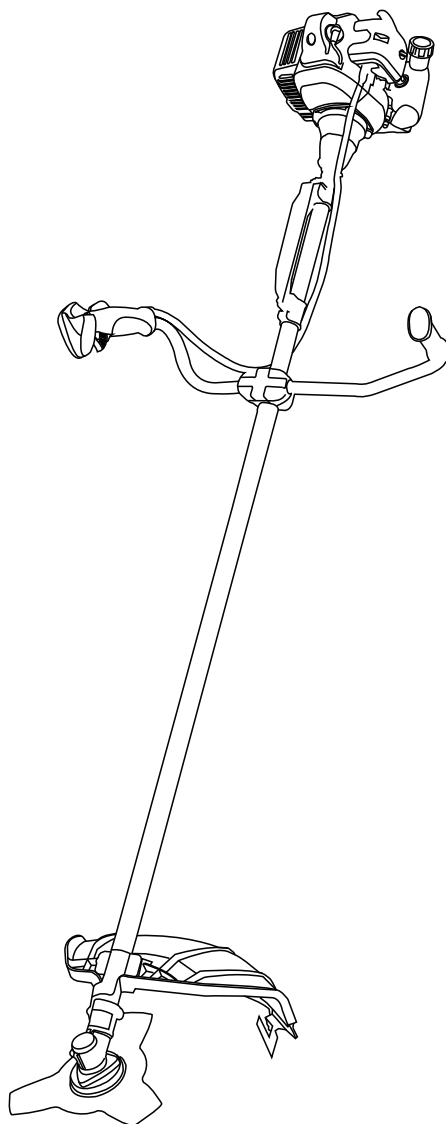


Spare parts list

Spare parts list BCEm 5220

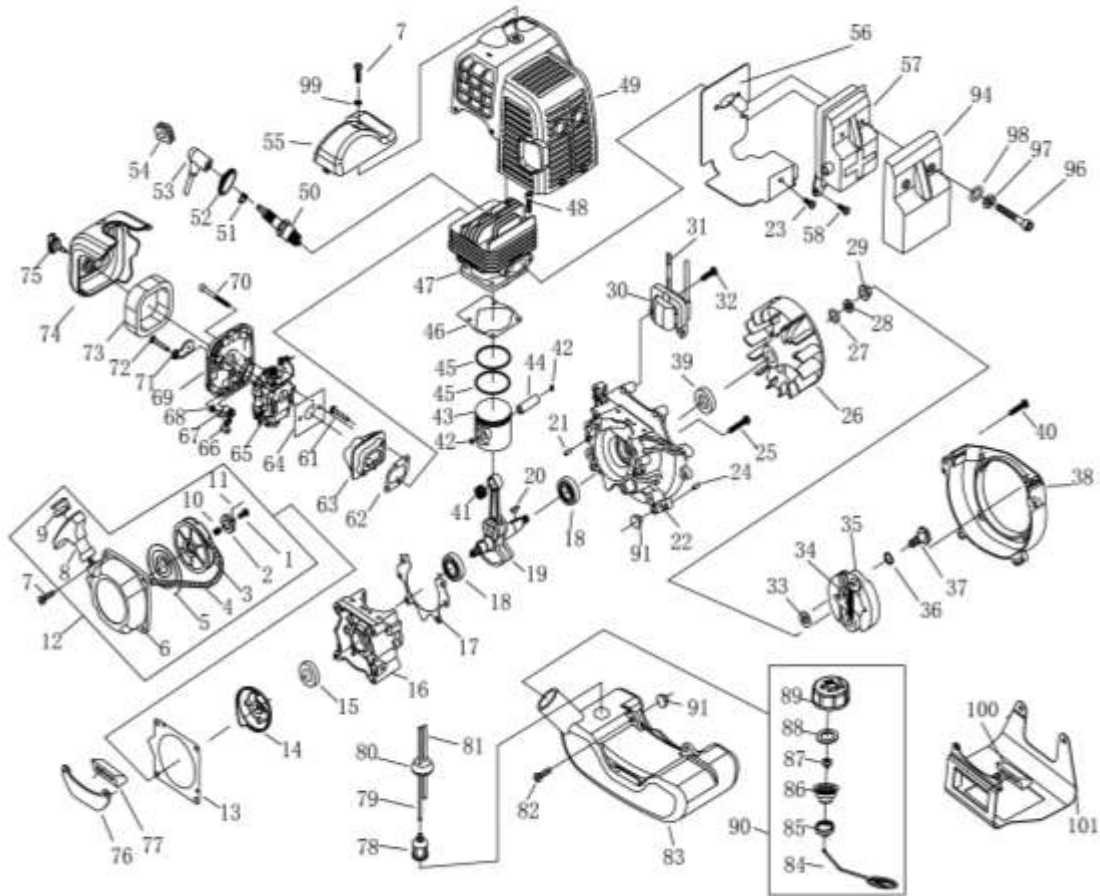


ORDER CODE	KIT NO.	description	Including positions
60052020201SE01	KIT NO.1	Starter KIT	1,2,3,4,5,6,7,8,9,10,11,12
60052020201SE02	KIT NO.2	Crank Case	13,14,15,16,21,22,23,24,25,39
60052020201SE03	KIT NO.3	FLYWHEEL	26,27,28,29
60052020201SE04	KIT NO.4	Cord Comp.	30,31,32
60052020201SE05	KIT NO.5	Expander	33,34,35,36,37
60052020201SE06	KIT NO.6	Fuel Pipe	78,79,80,81
60052020201SE07	KIT NO.7	Fuel Tank Cap	84,85,86,87,88,89,90
60052020201SE08	KIT NO.8	Body parts	38,40,49,55,74,75,76,77,94,96,97,98,99,100,101
60052020201SE09	KIT NO.9	Fuel Tank	82,83,91
60052020201SE10	KIT NO.10	Crank Shaft	17,18,19,20,41,82,73,91
60052020201SE11	KIT NO.11	Piston	42,43,44,45,46,47,48,82,83,91
60052020201SE12	KIT NO.12	Carburetor	61,62,63,64,65,66,67,68,69,70,71,72,73,82,83,91
60052020201SE13	KIT NO.13	Spark Plug	50,51,52,53,54,82,83,91
60052020201SE14	KIT NO.14	Muffler	56,57,58,85,83,91

Spare parts list BCEm 5220

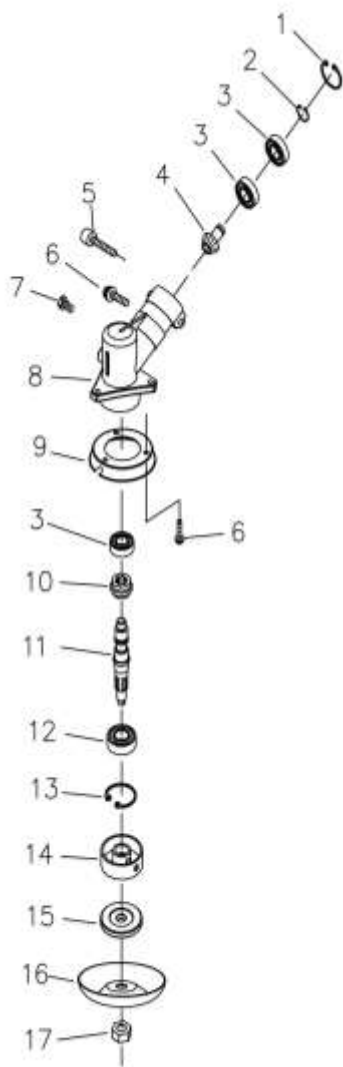


ORDER CODE	KIT NO.	description
60052020201SB01	KIT NO.1	Gear Case Ass'y

Spare parts list BCEm 5220

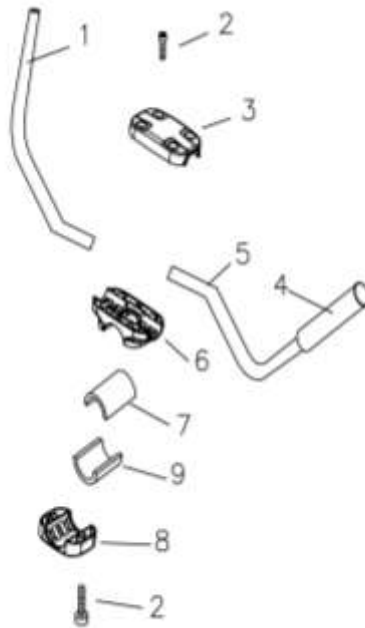


ORDER CODE	KIT NO.	description
60052020201SB02	KIT NO.2	Handle

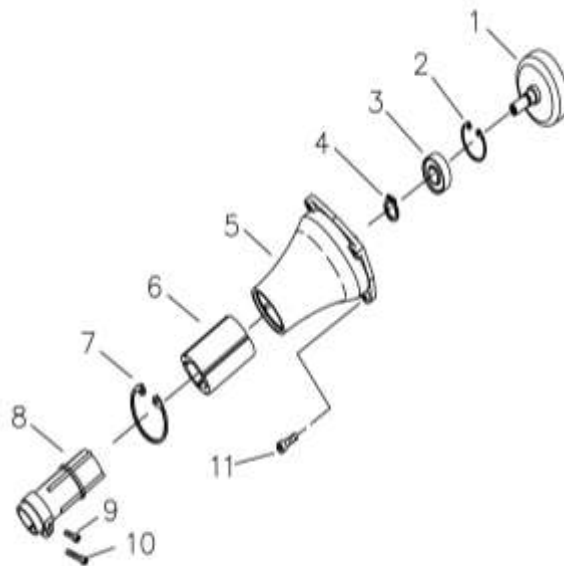


ORDER CODE	KIT NO.	description
60052020201SB03	KIT NO.3	Clutch Drum assy

Spare parts list BCEm 5220

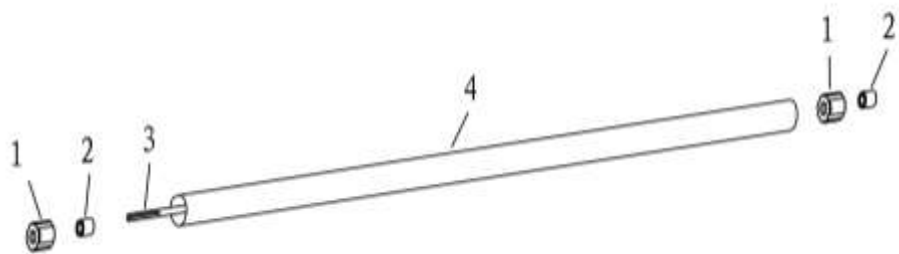


ORDER CODE	KIT NO.	description
60052020201SB04	KIT NO.4	Pipe Comp.

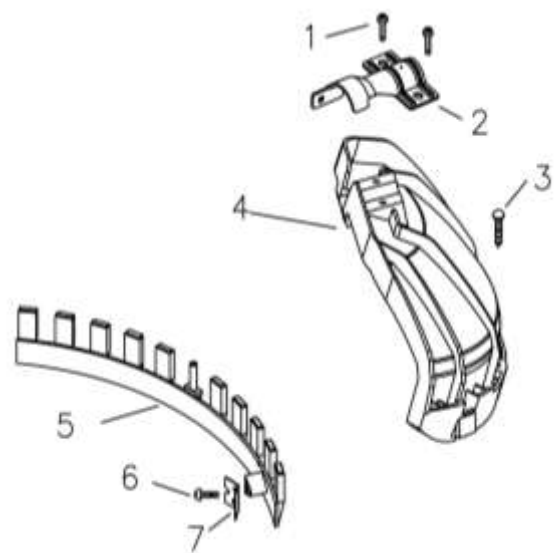


ORDER CODE	KIT NO.	description
60052020201SB05	KIT NO.5	Guard Ass'y

Spare parts list BCEm 5220

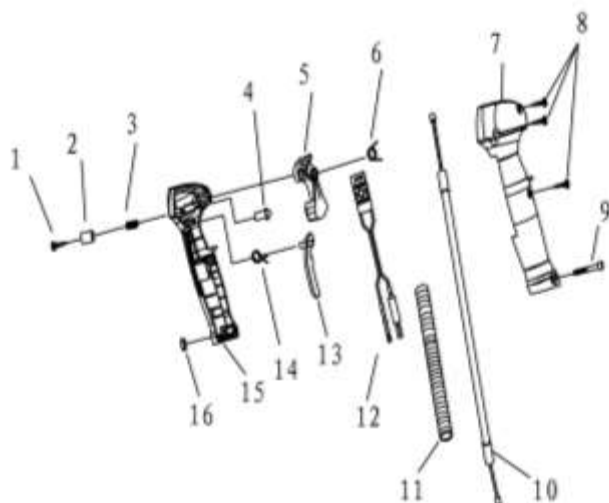


ORDER CODE	KIT NO.	description
60052020201SB06	KIT NO.6	Lever Ass'y

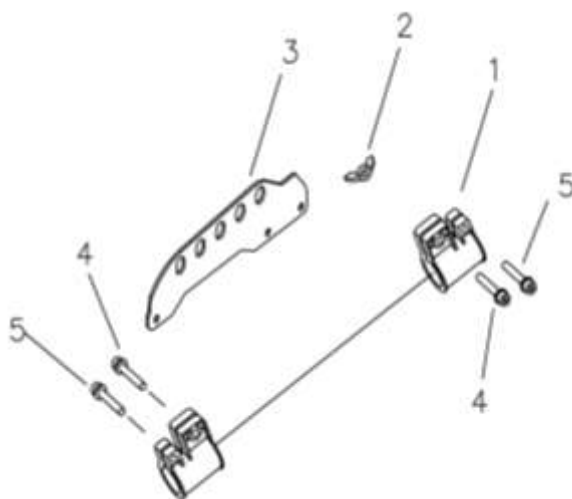


ORDER CODE	KIT NO.	description
60052020201SB07	KIT NO.7	Holder Ass'y

Spare parts list BCEm 5220

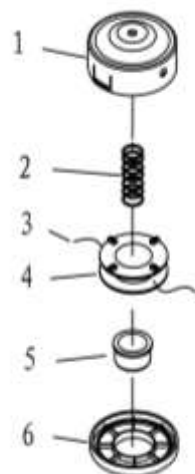

ORDER CODE	KIT NO.	description
60052020201SB08	KIT NO.8	Nylon Cutter Head

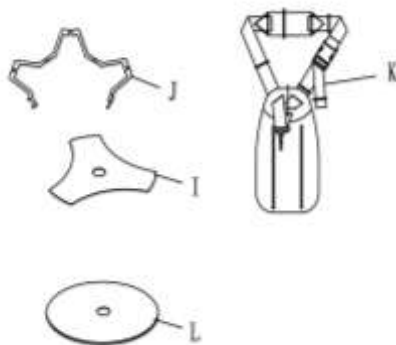

ORDER CODE	KIT NO.	description
60052020201SB10	KIT NO.10	Guard
60052020201SB11	KIT NO.11	Harness Ass'y
60052020201SB12	KIT NO.12	Blade